


FIRE TRENCH, SHOWING ENTRANCE TO SHELTER

The shelter is of use only in a narrow or deep trench.

Note that the floor is above the bottom of the trench.

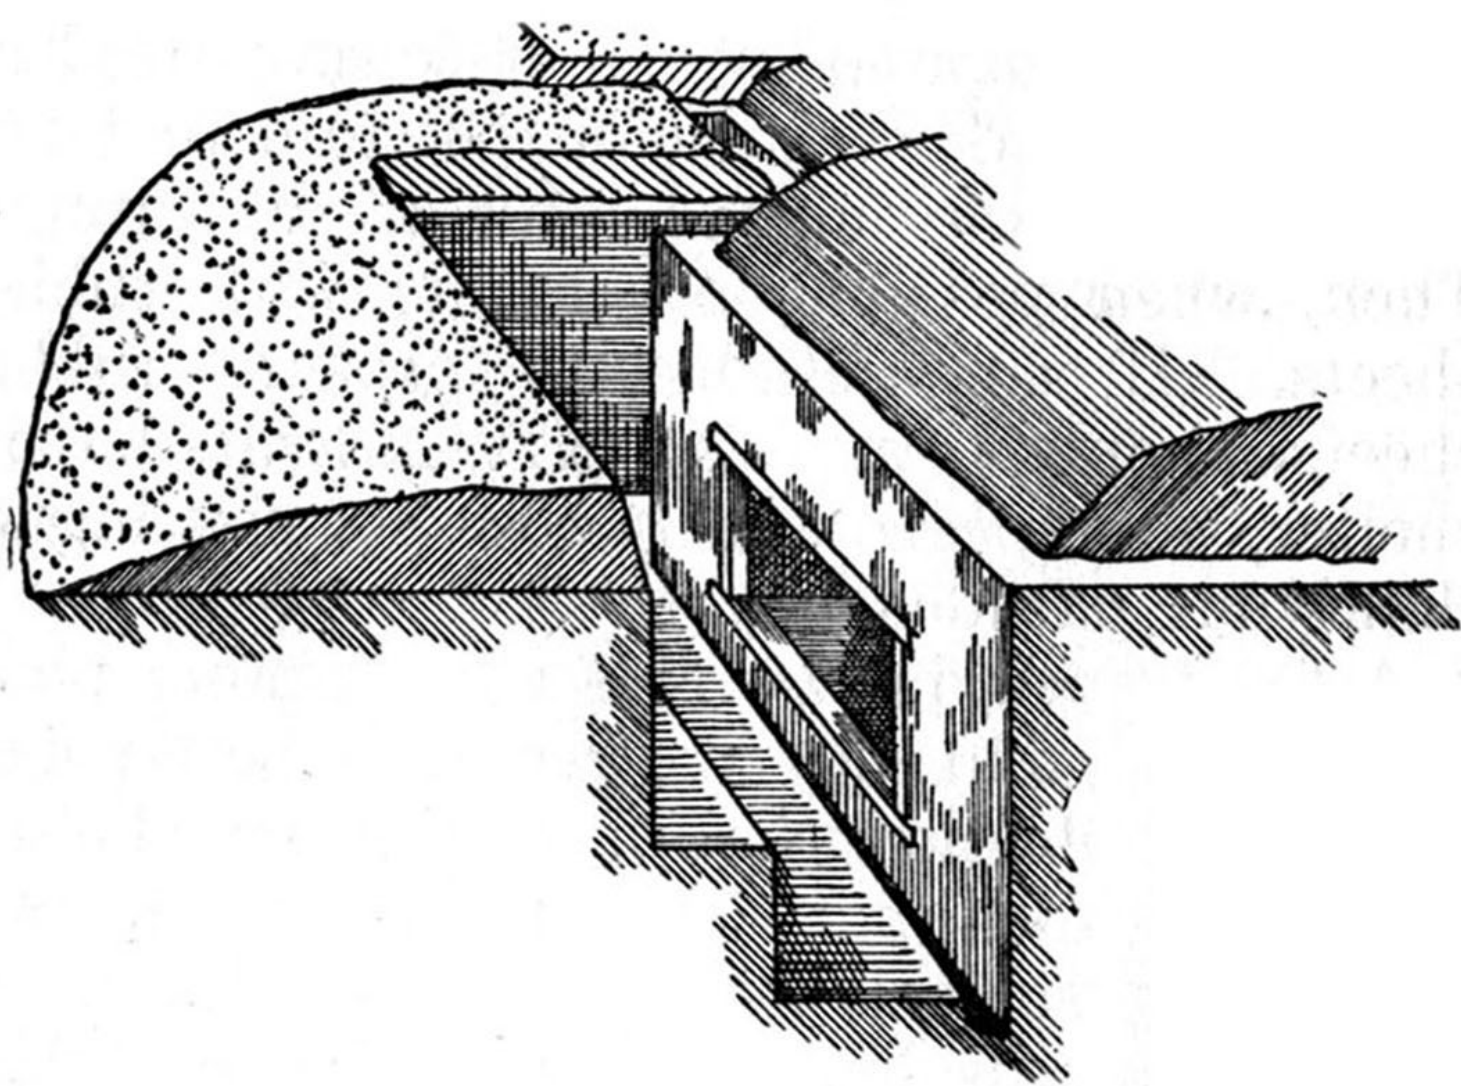

It is only under very exceptional circumstances that under-cutting a trench wall is allowed, and then the shelter should be cut in the rear wall only. These shelters must be carefully supervised and watched by the officer, as men are very often careless, with the result that the shelters are dug in a hurry and poorly. Then it rains, the shelter falls in, and the men are no more. It should be high enough for a man to sit up straight, and long enough for him to lie down in, and deep enough for two men to lie side by side. It should be raised at least a foot above the floor level in the trench to prevent water from the trench floor coming in. A shelter smaller than these dimensions is useless. It has a demoralizing effect, destroying all activity, mental and physical.

T R E N C H W A R F A R E

BY

J. S. SMITH

**SECOND LIEUTENANT WITH THE BRITISH
EXPEDITIONARY FORCE**

COPYRIGHT, 1917,

By E. P. DUTTON & CO.

~page 19 & 20~

OldMagazineArticles.com